## Simon XT Remote Access Card

## How to gain remote access to the control panel:

- Call the panel. (In most cases this is the same number as the regular phone.).
- 2. Let the phone ring twice, then hang up.
- 3. Wait between 10 and 15 seconds, then call the panel again.

## The panel will answer ("System on Enter Access code").

- 1. Press \* and enter your Access code. You will hear a beep.
- Proceed with system commands.
- 3. When finished using the remote access please press 9.
- \* If 1. and 2. do not connect to panel call again, let the phone ring 12 times and the panel will answer.

## **Phone Commands**

Disarm the System

Arm to Home

Arm to Away

Check Status
Turn Light On

Turn Light Off

Turn All Lights On

Turn All Lights Off

Hang Up **1850 753 753** 

0

+ Light Number
+ Light Number

\* + \*

# + #

9





Your safety. Our passion.